

High/Low Valve Kits

407127A

Husky™ 1050HP Diaphragm Pumps

EN




Important Safety Instructions

Read all warnings and instructions in the Husky® 1050HP 2:1 Air-Operated Diaphragm Pump Repair/Parts manual. Save all instructions.

High/Low Valve Replacement Kit 24W948

Ref.	Description	Qty.
211	HIGH/LOW VALVE ASSEMBLY	1
213	GASKET, air valve	1
217	SCREWS, M6 x 25, hex washer head	4
---	LUBRICANT	1

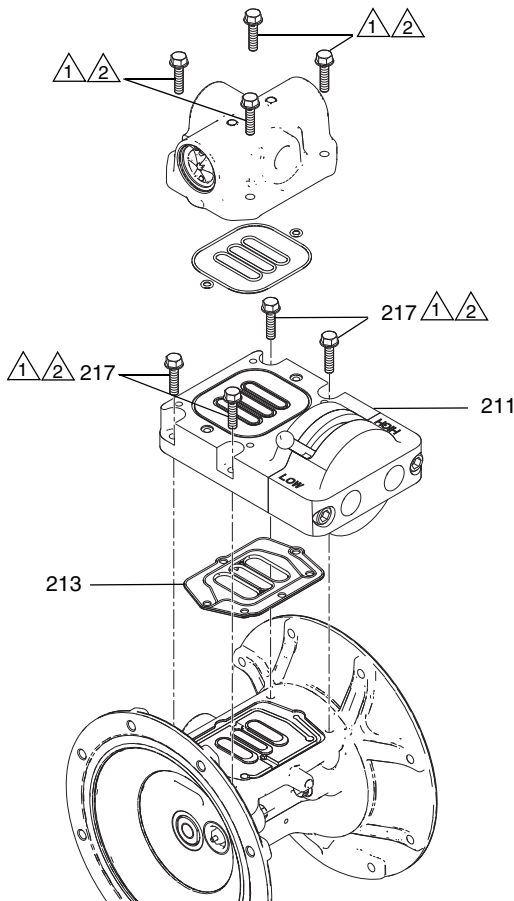


High/Low Valve Seals Kit 24W949

Ref.	Description	Qty.
402	O-RING, size 017, PTFE	4
405	O-RING, size 031, PTFE	1
---	LUBRICANT	1

High/Low Valve Spool Kit 24W950

Ref.	Description	Qty.
402	O-RING, size 017, PTFE	4
403	LEVER	1
404	SPOOL	1
405	O-RING, size 031, PTFE	1
---	LUBRICANT	1

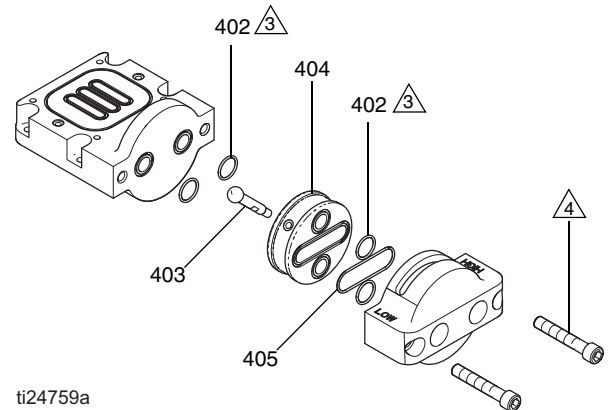

- 1 Apply thread lubricant to threads before assembly.
- 2 Torque screws to 75-85 in-lb (8-9 N•m).
- 3 Apply lithium-based grease.
- 4 Torque to 340-360 in-lb (38-41 N•m).